

To Fit & Use The Leg Lock: Before following instructions
1-5 remove the outer by inserting the key and turning anti-clockwise.



Fig 1. Remove inner sleeve from locking outer cover by inserting a lock key and turning anti-clockwise.



Fig 2. Fit the inner sleeve over the corner steady's hexagonal bolt head, grub-screw end first. Tighten the grub screw with the allen key provided to secure.



Fig 3. Adjust the height of the corner steady by inserting the 17mm hexagon key into the exposed end of the inner sleeve. Wind up / down with a wheel brace then remove hexagon key.



Fig 4. Remove the key from the locking outer cover and push it onto the inner sleeve. It will click into place when secured. The locking outer cover will now spin freely



Fig 5. To remove the locking outer cover, hold securely, insert a lock key and turn anti-clockwise. The locking outer cover will now slide off.