



	Spare part number	Spare part number
1	Right upper hinge	
2	Left upper hinge	
3	Left bottom hinge	692751
4	Right bottom hinge	
5	Thermistor	
6	Thermistor cover	692776
7	Door switch panel	692801
8	Technical panel	692754
9	Circuit board light panel	
10	Control panel	692803
11	Control housing	692804
12	Sticker	692805
13	Fan	692777
14	Fan cover	
15	Fan net	691867
16	Light housing	
17	LED light	692779
18	Light cover	
19	Breakfast tray	692808
20	Door latch plate	
21	Winter lock support	692758
22	Plate	692362
23	Drip cup	692810
24	Condenser fan cover	691887
25	Condenser fan	692785
26	Power cord	691873
27	2-way valve	
50	Control module	692821
28	Freezer door	691877
29	Food retainer	692789
30	Cover slide out box	691865
31	Clip shelf large	692791 692761
32	Shelf	692816
33	Foaming door	
34	Door panel	69233227SP 692817
35	Door Bin	692794
36	Drawer divider	691878
37	Vegetable bin slide guide	691874
38	Door cover	
	< E006#ZDW00530001	692764
	≥ E006#ZDW00530001	692875

39	Drawer bin	691860	
40	Upper hinge shaft		692883
41	Silicone blanking cap		
42	Upper hinge shaft		
43	Upper hinge shaft spring		
44	Panel retainer		
	< E006#ZDW00530001	692768	
	≥ E006#ZDW00530001		692885
45	Handle groove		692886 ≥ E006#ZDW00530001
46	Handle	692770	
47	Handle connection shaft	< E006#ZDW00530001	
48	Big handle spring		
49	Small handle spring		
50	Control module		
	Serial Number range		
	ExxxxDWxxxxx	691391	
	Exxx#xDW0026xxxx - Exxx#xDW0042xxxx		
	Exxx#xDW0043xxxx - Exxx#xDW0065xxxx	692821	

xxxxxx = not available anymore

Note Identification Label

With a request for information or service, always provide the serial number of the refrigerator. The serial number is the code below the barcode on the identification label.

