


## Guide to Fitting an AL-KO Personal Effects Safe

Tools required - Drill, 6.5mm drill, 10mm ring spanner or socket

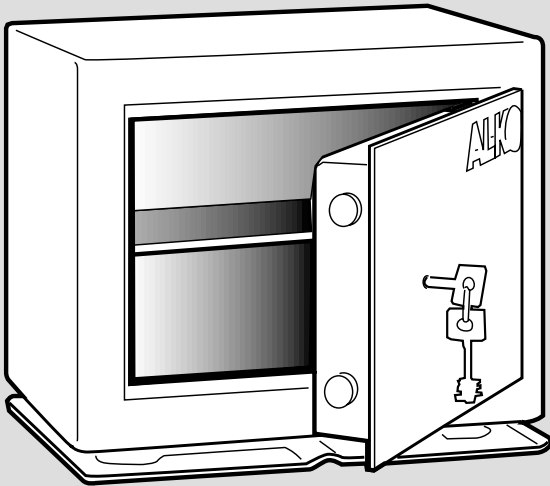

The AL-KO Personal Effects Safe comes complete with removable internal shelf, mounting plate, with all fixings, and 2 keys.

Select desired location, hidden inside a locker or bedbox. Check the safe will fit and the door can be operated. Care must be taken to ensure that there are no obstructions under the floor where the mounting plate is to be fitted (e.g. gas, electric, water services). **DO NOT OBSTRUCT ANY AIRVENTS**



Remove the safe and use the mounting plate as a template to mark where the holes have to be drilled.

The holes in the mounting plate are offset. Thus the edge of the mounting plate can be positioned flush to the same surface as the safe is fitted. Drill 6.5mm diameter holes.

Check floor thickness and select appropriate bolts from fixings supplied. (see table)

Position the mounting plate on the underside of the floor so that its' surface is flush with the floor and the bolt heads are in the recesses in the mounting plate.


Floor Thickness (mm)	Bolt Length (mm)
34.5	50
38 - 41	55
60	65



Remove the 4 appropriate bungs from the floor or rear wall of the safe. Insert the bolts through the mounting plate, floor and safe. The smooth head of the bolt must be on the outside. Place the washers onto the bolts protruding into the safe and use the dome headed nuts to secure.

**WARNING** If installing safe flat on its back then care should be taken when operating door to ensure it is not accidentally knocked shut.

**Do not use the key as a handle as it may cause the key to weaken or distort.**

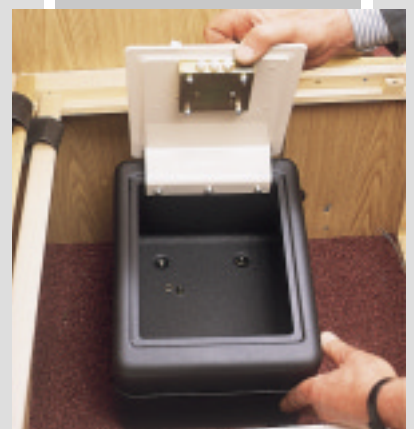

Part No.	External Dimensions (mm)	Internal Volume	Outer Wall Thickness	Weight
245091	300 x 240 x 200	14 litres	3mm	8.5kgs

In line with our company policy of constant improvement, we reserve the right to change the specifications without notice.