

PRODUCT GROUP: Cookers
PRODUCT CATEGORY: K1520 Cooker

PRODUCT: SCK42xxx

SPARE PART: Aspire to K1520 Converison Retrofit Kit

Spare part number: SSPA1025

#### **INTRODUCTION**

This is the field service instruction to replace an Aspire Cooker with a K1520, using the conversion kit SSPA1025.

Please read the information and instructions carefully and follow them strictly to install the parts safely and correctly.

All the parts in this kit must be used to ensure warranty is valid.

Please ensure all work is carried out by a competent and appropriately qualified person.

Isolate the appliance from both the electricity and gas prior to carrying out this work instruction.

For more information visit www.thetford-europe.com or contact the Thetford Customer Service in your country.





SRFI1026 10.03.2021 Page **1** of **6** 



PRODUCT GROUP: Cookers
PRODUCT CATEGORY: K1520 Cooker


PRODUCT: SCK42xxx

SPARE PART: Aspire to K1520 Converison Retrofit Kit


Spare part number: SSPA1025

A Remove the old appliance by taking out the fixing screws in the front and sides of the installation. The screws will be located on the front of the appliance going into the batons indicated and along the side of the appliance near the pressing into the worktop.

Then remove the batons as indicated to ensure the cabinet aperture is 502-504mm wide, from the front to the back and top to bottom of the cabinet.

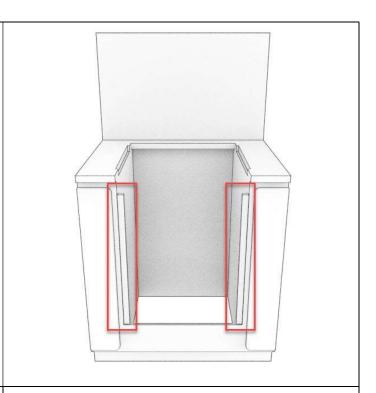

B Fold the supplied installation gauge (as indicated) and mark the trim positions, using the front edge of the worktop as reference on both sides of the cabinet.

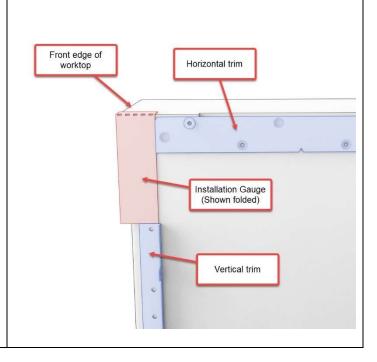

SRFI1026 10.03.2021 Page **2** of **6** 



PRODUCT GROUP: Cookers
PRODUCT CATEGORY: K1520 Cooker


PRODUCT: SCK42xxx

SPARE PART: Aspire to K1520 Converison Retrofit Kit

**Spare part number: SSPA1025** 


C Fit horizontal trims along each side of the worktop using screws in the 3 dimpled holes near the notches at the bottom.

N.B. The dimples should face outward from the appliance, so the trim stands off the cabinet. The direction notches should be at the bottom of the trim.

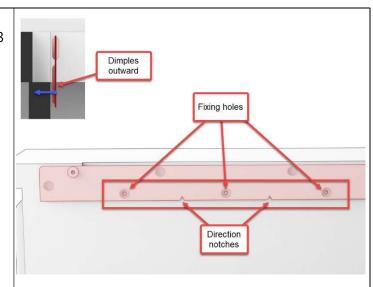

**D** Fit vertical trims with 3 screws using the clearance holes, select holes relevant to the cabinet installation.

N.B. It is recommended to use at least one hole from the top group and at least one hole from the bottom group.

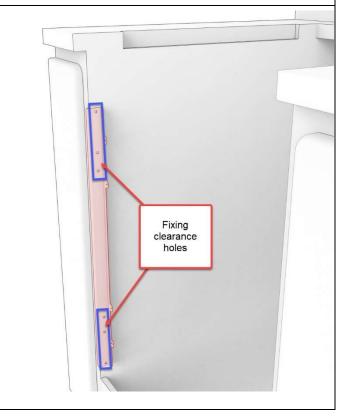

SRFI1026 10.03.2021 Page **3** of **6** 




PRODUCT GROUP: Cookers
PRODUCT CATEGORY: K1520 Cooker

PRODUCT: SCK42xxx

**SPARE PART: Aspire to K1520 Converison Retrofit Kit** 


Spare part number: SSPA1025

**E** Fit the bottom trim (view shown inside cabinet), using 3 screws fitted from inside the cabinet.

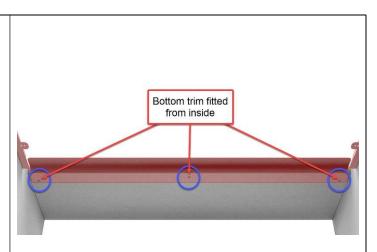

F Fold back the top tab on right vertical trim, pliers may be required.

N.B. THIS IS ESSENTIAL FOR ENSURING ADEQUATE VENTILATION TO THE APPLIANCE.

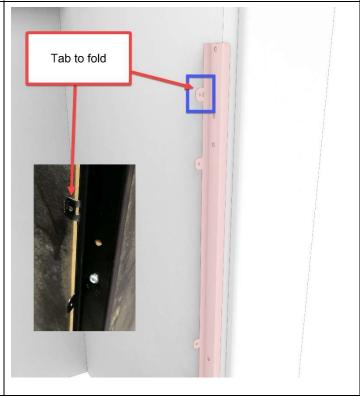

SRFI1026 10.03.2021 Page **4** of **6** 




PRODUCT GROUP: Cookers
PRODUCT CATEGORY: K1520 Cooker

PRODUCT: SCK42xxx

**SPARE PART: Aspire to K1520 Converison Retrofit Kit** 

Spare part number: SSPA1025

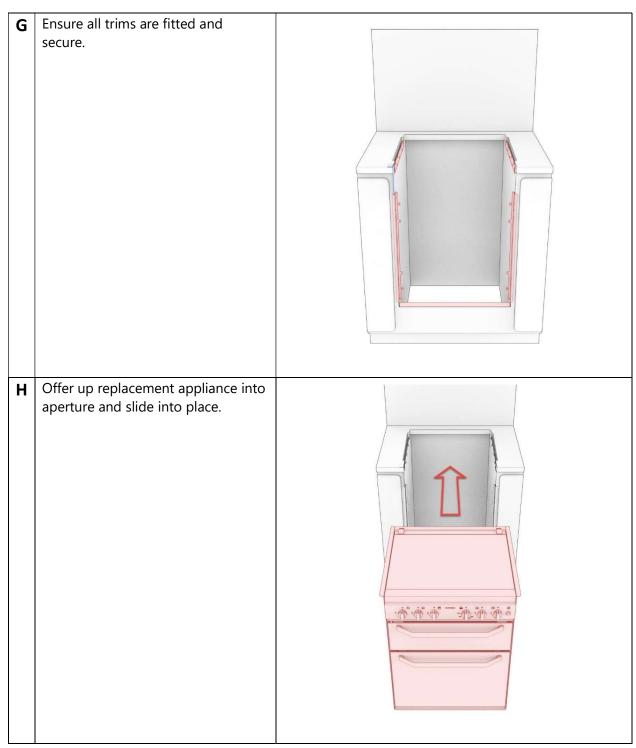

SRFI1026 10.03.2021 Page **5** of **6** 



PRODUCT GROUP: Cookers
PRODUCT CATEGORY: K1520 Cooker

PRODUCT: SCK42xxx


SPARE PART: Aspire to K1520 Converison Retrofit Kit

Spare part number: SSPA1025


J Use the screws supplied to fix the appliance to the vertical trims at the fixing positions as indicated.

Then check that the right-hand vents are clear and free from obstructions.

N.B. THIS IS ESSENTIAL FOR ENSURING ADEQUATE VENTILATION TO THE APPLIANCE.

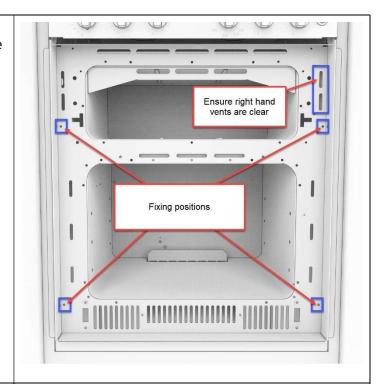

K Lift the appliance lid and use screws appropriate for the installation (12mm+ long screws) to fix the appliance horizontally into the worktop plates.

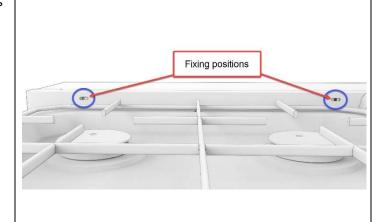

SRFI1026 10.03.2021 Page **6** of **6**